


INSTALLATION MANUAL

Supplied parts and hardware:

8x M12X40 bolt	4x Allen key	1x CABINETS INSTALLATION MANUAL	8x Plastic decorative cover	2x One single door A double door	4x Two single door	32x M5X10 bolt
8x The key	4x M6X12 bolt	M6X15 bolt	M12 Adjustable feet	4x Castors	M6 M6X12 20 (FP-24) - 40 (FP-42)	

Required for installation:

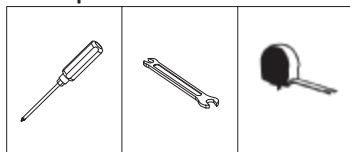

Max 1300 kg






ATTENTION!!!


Read carefully this instruction before unpacking the cabinet.



Unpacking and the product must be made in the flat position and using appropriate personal protective equipment such as safety helmet, safety shoes and gloves.

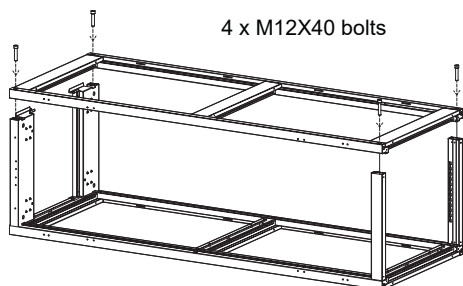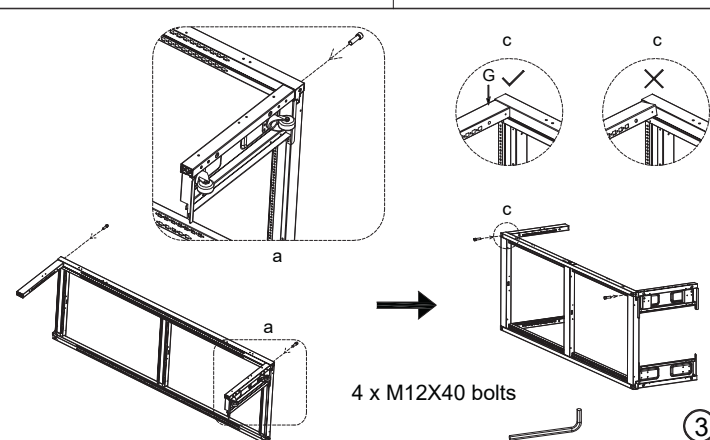
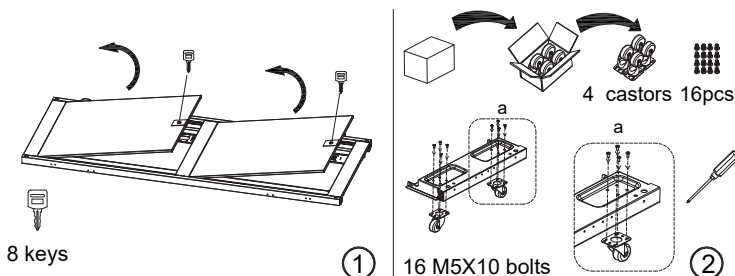


If during assembly of the side upright the holes are not aligned or if there is a space of 4mm between the uprights, it is required to loosen the bolts and reassemble.

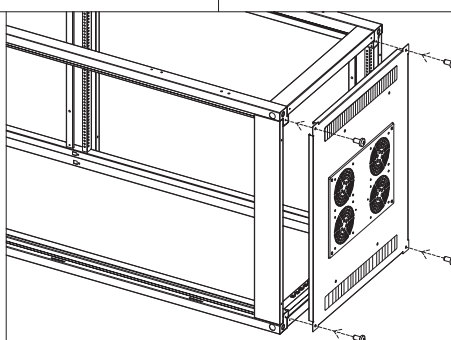


For the cabinet over 800 depth, the fans should be assembled closed to the rear door.

 4 x M5X10 bolts

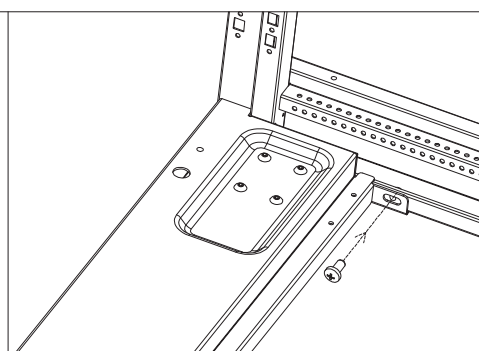

4 x M6X12 bolts


4 x M12 adjustable feet

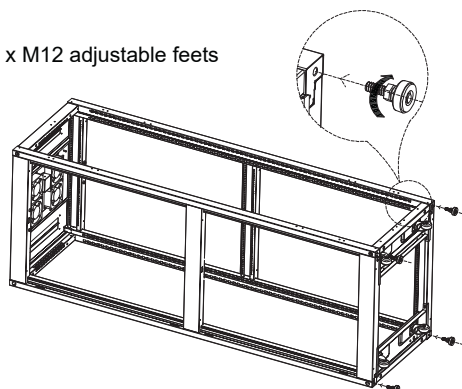

After assembling, the M12 feet should be under (shorter than) the castors in case of breaking when set up the cabinet!




4 x M5X10 bolts

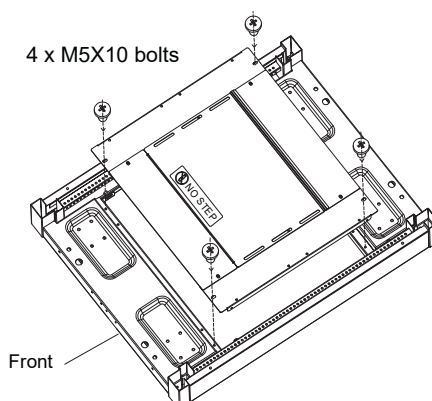

Front

When assembled the "No Step" sticker is at the front of the cabinet.

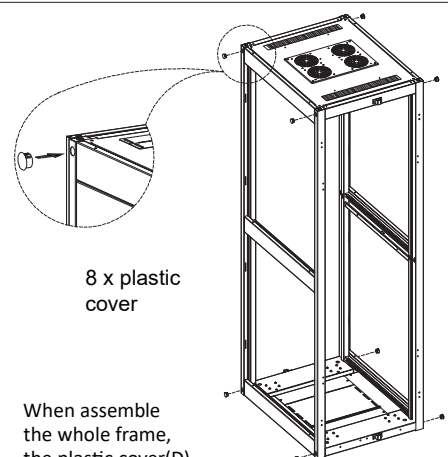


8 x plastic cover

When assemble the whole frame, the plastic cover(D) should be removed.



10




When assembling the side panels, it is necessary to lock the panels and remove the keys in case of falling down!

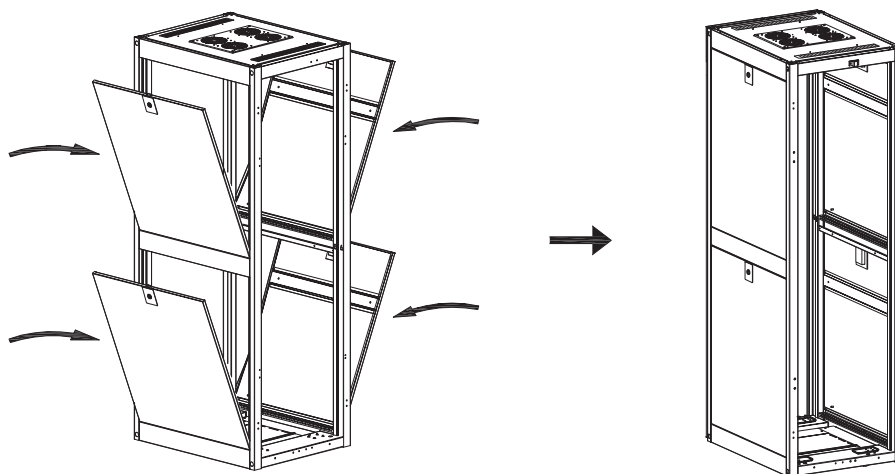




Single or double doors can be fitted front and rear - (Normally single door at the Front and double doors at the rear).

Fitting Single Door
2 Hinges for 42U and smaller
3 Hinges for 47U and taller

 Fitting Double Door
2 Hinges for 42U and smaller
3 Hinges for 47U and taller

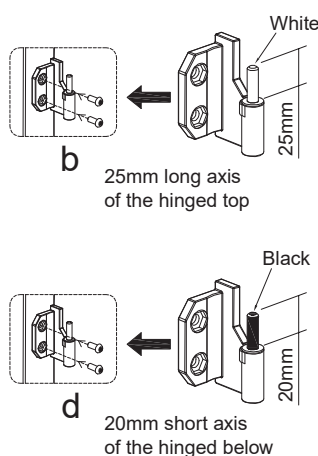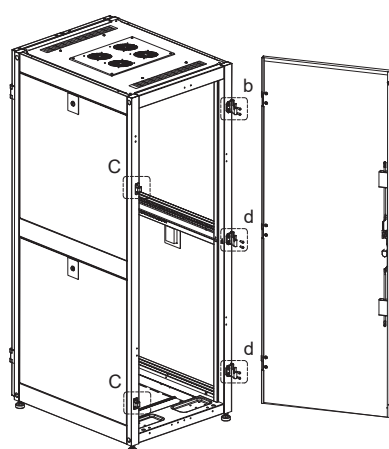

Chain stopper		2
M6X15 bolt		4(45U)/6(45U)
M5X10 bolt		4

 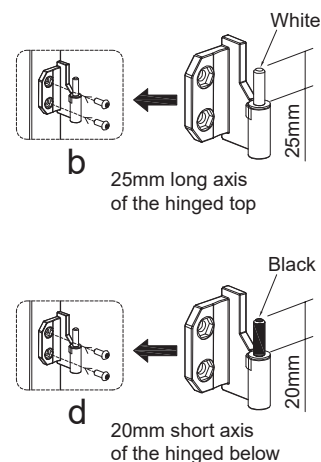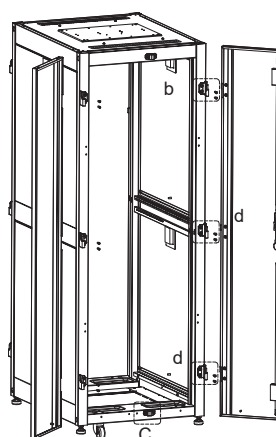

Chain stopper		2
M6X15 bolt		8(45U)/12(45U)
M5X10 bolt		4

Doors can be adjusted by loosening hinge screws, moving the door and retighten.

