

• **Important Safety Notice**

Please read below safety instructions carefully before installation and operation:

- 1. Please pay attention to all the warnings and hints on this device.
- 2. Do not expose this unit to rain, moisture and liquid.
- 3. Do not put any stuff into the device.
- 4. Do not repair the device or open the enclosure without professional person guidance to avoid electronic shock.
- 5. Make sure good ventilation openings to avoid product overheating damage.
- 6. Shut off power and make sure environment is safe before installation.
- 7. Do not plug-in/out the network cables and IR cables when it is in using to avoid cables damage.
- 8. Use DC5V only. Make sure the specification matched if using 3rd party DC adapters.

• **Introduction**

This HDMI wireless extender includes transmitter unit and receiver unit, allows to transmit and extend HDMI signal up to 50 meters long away wirelessly, it has strong anti-interference ability by running at 5GHz operation frequency. This wireless extender not only supports point to point configuration, but also supports one to many (1 to 2) and many to many (2 to 2, 2 to 1) configuration. This extender supports wide range IR passback frequency 20-60KHz to realize remote control of source devices from receiver side. With both button control and IR controller, makes channel setting easily. It is really a very good solution for transmitting one or more HDMI source signal to one or more screens in long distance without running wires simultaneously, perfect for application of conference, home entertainment and education etc.

Note:

 
- 1) Transmission distance will be different due to the environment.
- 2) Wall, brick or glass will shorten the signal cover range or cause big signal loss.

- 3) It is recommended that the distance between each unit should be more than 5 meters.

• **Features**

- 1. Smart portable design, wonderful performance.
- 2. Highest resolution up to 1080p full HD.
- 3. Strong anti-interference ability by running at 5GHz operation frequency.
- 4. Support point to point configuration, one to many (1 to 2) configuration and many to many (2 to 2, 2 to 1) configuration.
- 5. Support IR passback with 20-60KHz frequency.
- 6. Supports button control to set channels and IR controller to switch and choose input sources from receiver side.
- 7. 50m long range transmission distance.

• **Package Contents**

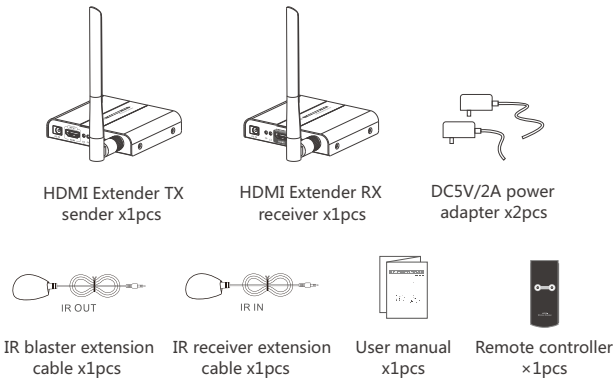


• **Installation Requirement**

- 1. HDMI source device (DVD, PS3, Set top box, PC etc)
- 2. HDMI display device like SDTV, HDTV, and projector with HDMI port.


• **Panel Description**

 - 1. HDMI Extender TX sender

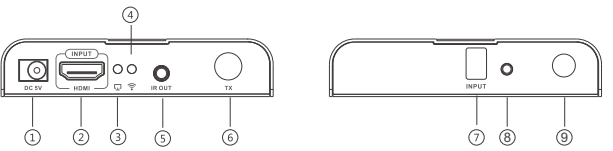


|   |                                      |                                                                                                                                                 |
|---|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Power input                          | Connect with DC5V/2A power adapter                                                                                                              |
| ② | HDMI input                           | Connect with HDMI source device                                                                                                                 |
| ③ | HDMI signal indicator                | HDMI signal input, it always on                                                                                                                 |
| ④ | Wireless connections indicator       | It's on when the transmitter and the receiver connect well with each other, other wise, it's off                                                |
| ⑤ | IR blaster extension cable interface | Connect with IR blaster extension cable. Please put the IR blaster close to source device to better transmit the IR signal from receiver        |
| ⑥ | Antenna                              | Launch wireless signal                                                                                                                          |
| ⑦ | Input CHANNEL indicator              | Indicate the input CHANNEL as a number, and when the CHANNEL of transmitter as same as the CHANNEL of receiver, wireless transmission connected |
| ⑧ | Digital control button               | Display CHANNEL channel parameters                                                                                                              |
| ⑨ | IR remote control window             | Receive IR remote control signal                                                                                                                |

 2.HDMI Extender RX receiver

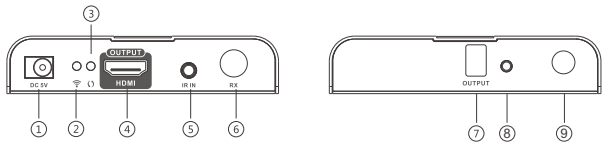


|   |                                       |                                                                                                                                                  |
|---|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Power input                           | Connect with DC5V/2A power adapter                                                                                                               |
| ② | Wireless connections indicator        | It's on when the transmitter and the receiver connect well with each other, other wise, it's off                                                 |
| ③ | Data transmission indicator           | Led blinks slowly when it is building connection. Led blinks fast when it is successfully connected and transmitting data                        |
| ④ | HDMI output                           | Connect with HDMI display device                                                                                                                 |
| ⑤ | IR receiver extension cable interface | Connect with IR receiver extension cable. Please make sure the remote control is within the required range of IR receiver                        |
| ⑥ | Antenna                               | Receive wireless signal                                                                                                                          |
| ⑦ | Output CHANNEL indicator              | Indicate the output CHANNEL as a number, and when the CHANNEL of transmitter as same as the CHANNEL of receiver, wireless transmission connected |
| ⑧ | Digital control button                | Display CHANNEL channel parameters                                                                                                               |
| ⑨ | IR remote control window              | Receive IR remote control signal                                                                                                                 |

 
1. Point to Point connection:

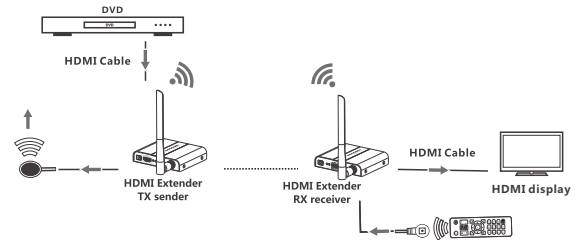

 2. One to two connection:

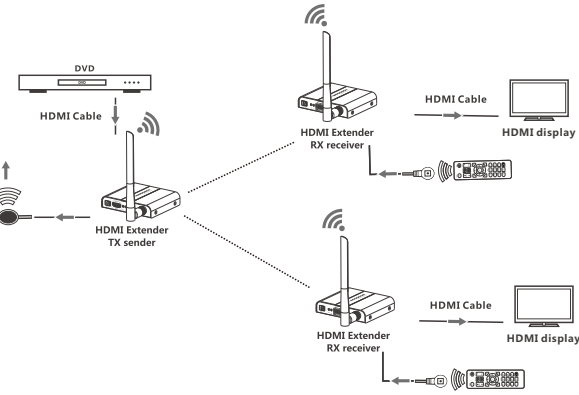

 3. Matrix connections

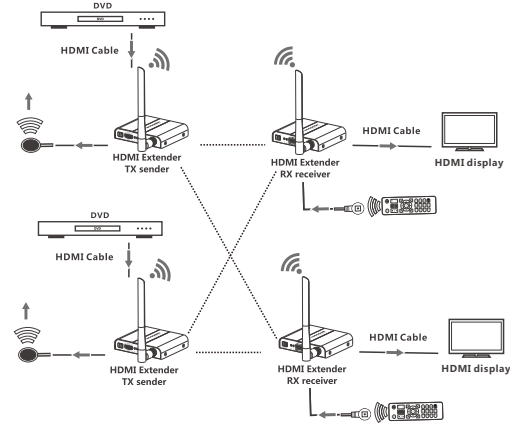

Connection instruction:

- 1) Connect HDMI input with HDMI source device and connect IR blaster extension cable with IR OUT interface of the sender (TX).
- 2) Connect HDMI output with HDMI display device and connect IR receiver extension cable with IR IN interface.
- 3) Power on the device (power led lights) and it works.

Note:

- 1) When the wireless signal transmits through wall, glass or other obstacles, it will cause signal loss. Please install this device in good environment with few obstacles.
- 2) This wireless matrix can support up to 2 transmitter work with 2 receivers simultaneously, please make sure each device keep 5 meters away from others at least.
- 3) The environment wireless signal will affect transmission, such as microwave, wireless mouse and keyboard etc.

FAQ

Q: Transmitter and receiver can't be connected with each other?  
A: 1) Please check and make sure both receiver and transmitter have been powered on  
2) Please check and make sure the input channel of the transmitter and the output channel of the receiver are the same.

Q: The wifi LED indicator of the transmitter keeps on, but no signal output on display/monitor?  
A: 1) please check if there is an HDMI signal input of sender TX  
2) Try to connect the signal source directly to display device to see if there is signal output from source device or change the signal source, HDMI cables and try again.

Q: Display not fluent and stable  
A: 1) Please move the position of sender (TX) and receiver (RX) and make sure the device is within the signal coverage.  
2) Press "reset" button on the TX/RX panel, reset and reconnect.  
3) Remove other wireless signal disturbance and reduce the obstacle on the way.

Specification

| Items                              | Specification                                 |                                                                                        |
|------------------------------------|-----------------------------------------------|----------------------------------------------------------------------------------------|
| Power supply                       | Voltage/Current                               | DC5V/2A                                                                                |
|                                    | Power consumption                             | TX < 7W   Rx < 5W                                                                      |
| HDMI performance and interface     | HDMI compliance                               | HDMI1.3                                                                                |
|                                    | HDCP compliance                               | HDCP1.2                                                                                |
|                                    | HDMI resolution supported                     | 480i@60Hz, 480p@60Hz, 576i@50Hz, 576p@50Hz, 720p@50/60Hz, 1080i@50/60Hz, 1080p@50/60Hz |
|                                    | Supports audio formats                        | L/R stereo audio                                                                       |
|                                    | Maximum transfer rate                         | 10.2Gbps                                                                               |
|                                    | Audio signal transmission format              | L/R stereo audio                                                                       |
|                                    | Input and output TMDS signal                  | 0.5 ~ 1.5Vp-p(TMDS)                                                                    |
|                                    | Input and output DDC signal                   | 5Vp-p(TTL)                                                                             |
|                                    | Input cable length supported                  | ≤5m(AWG26 HDMI1.3cable standard)                                                       |
|                                    | Output cable length supported                 | ≤5m(AWG26 HDMI1.3cable standard)                                                       |
| IR performance and interface       | IR remote control                             | Support IR passback with 20-60KHz frequency                                            |
| Wireless performance and interface | Transmission method                           | 5.8G Wireless transmission                                                             |
|                                    | Transmission distance                         | 50 Meters                                                                              |
|                                    | Latency                                       | ≤200 ms                                                                                |
| Protection level                   | Electrostatic protection of the whole machine | 1a Contact discharge level 3                                                           |
|                                    |                                               | 1b Air discharge level 3                                                               |
|                                    |                                               | Standard: IEC61000-4-2                                                                 |
| Operating environment              | Working temperature                           | 0 ~ 50°C                                                                               |
|                                    | Storage temperature                           | -10 ~ 70°C                                                                             |
|                                    | Humidity (no condensation)                    | 0 ~ 90%                                                                                |

|                 |                                   |                                     |
|-----------------|-----------------------------------|-------------------------------------|
| Body properties | Dimension                         | 95(W) x 120.58(D) x 20.1(H)mm       |
|                 | Material                          | Iron alloy material + crystal panel |
|                 | Processing technology             | Sandblasting                        |
|                 | Colour                            | black                               |
| Reliability     | Weight                            | TX : 200g , RX : 200g               |
|                 | Mean time between failures (MTBF) | > 30000 Hours                       |

Disclaimer

The product name and brand name may be registered trademark of related manufacturers.TM and ® may be omitted on the user manual. The pictures on the user manual are just for reference, and there may be some slight difference with the real products.  
We reserve the rights to make changes without further notice to a product or system described herein to improve reliability, function or design.

HDMI Wireless Matrix Extender

User manual

Support many to many

